



CONTROLLAVIEW
VISION CONTROL SOLUTIONS

Vision **Control** For Doors

www.controllaview.com.au

Single Glazed **VISION PANELS**

The Controllaview door vision panel... The easy install, Innovative glazing concept...

With the Controllaview Vision Panel being pre-glazed and fully assembled - the installation of panels into existing or pre-finished doors is a time-efficient and simple process.

Vision panels are also an effective means of satisfying a broad range of safety requirements.

Vision panels are stocked in a wide range of sizes in a natural anodised finish. Custom sizes are made to order and panels can be manufactured using a broad range of glass types and frame finishes.

KEY FEATURES OF CONTROLLAVIEW VISION PANELS:

- Fully assembled pre-glazed panels
- Snap together installation into door with no fixings required
- Glazed using 6.38 clear laminate safety glass according to Australian Standards
- Suits door thicknesses - 32 to 48mm
- Custom sizes available



300 x 200mm




300 x 300mm



400 x 400mm



600 x 200mm

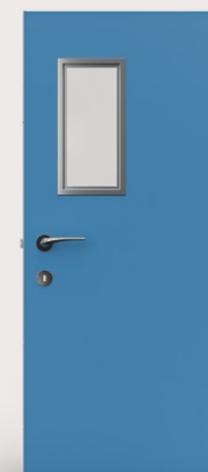

600 x 300mm



600 x 600mm



900 x 200mm



900 x 600mm



1700 x 200mm

Installation Instructions


Stocked sizes in Natural Anodised finish: H (mm) x W (mm)

300 x 200	600 x 600
300 x 300	900 x 200
400 x 400	900 x 600
600 x 200	1700 x 200
600 x 300	

Note: Sizes listed are actual cut out sizes.


Step 1

Insert main centre leg into upper channel.

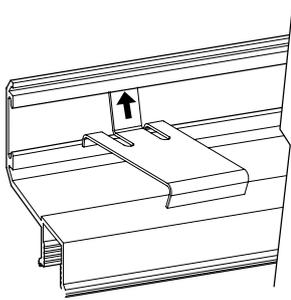


Step 2

Insert one small leg down into lower channel.

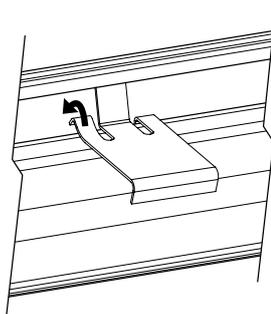



Step 3

Lift and insert second small leg down into lower channel.

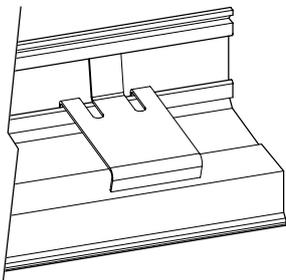

Step 4

Place front frame into opening and press back frame into position from opposite side of the door.

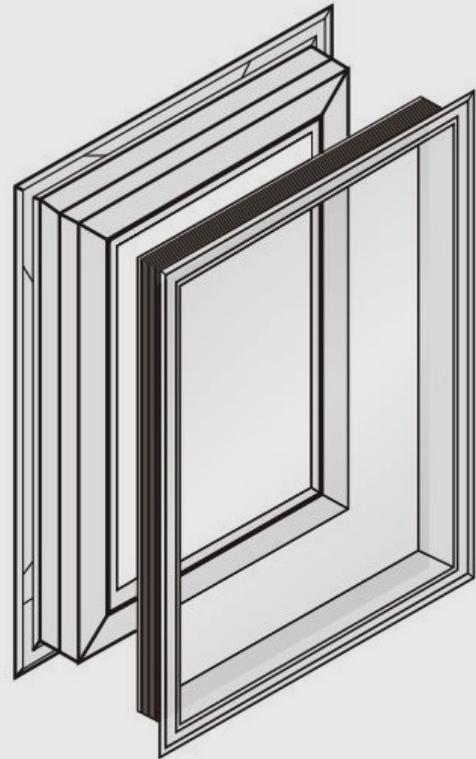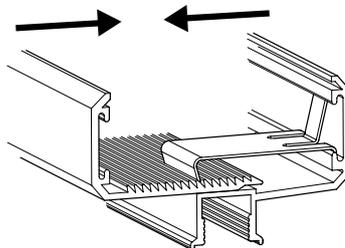

Note: To assist with shock absorption it is recommended adhesive sealant be applied between vision panel and door surface on installation.



Controllaview
makes your vision a reality